

PICCOLO SLM

Integrating Sound Level Meter & Datalogger

Soft dB
WWW.SOFTDB.COM

QUICK-GUIDE

2) **Leq/Lx** Display parameters

Press to display:

- LEQ, LMAX & LMIN
- SPL & SEL
- Record Number
- Averaging Time

STEP 3: **STORE**

- Press to store current data
(This action stops the current averaging process)
- Press and hold to start/stop the Averaging & Auto-Store data mode

Note the Record Number for later retrieval.

Used the PiccoloSLM software to retrieve and post-process the data (see the procedure on the verse of this page).

1) **ON/OFF** Power & Start

- Press and hold to **POWER ON/OFF**.
- Press to **START / STOP Averaging***



* **Default Measurement Set-up**

- LEQ 1 hour;
 - Response time : FAST
 - Frequency Weighting : dB(A)
 - Storage Option : LEQ, LMAX, LMIN, L%
- The measurement set-up can be customized using the PiccoloSLM software (see the procedure on back)*


PICCOLO SLM

Integrating Sound Level Meter & Datalogger

Soft dB
WWW.SOFTDB.COM

CONFIGURE AND RETRIEVE DATA

Install the software before connecting the USB cable (This installation make available the Driver requested for the USB connection)

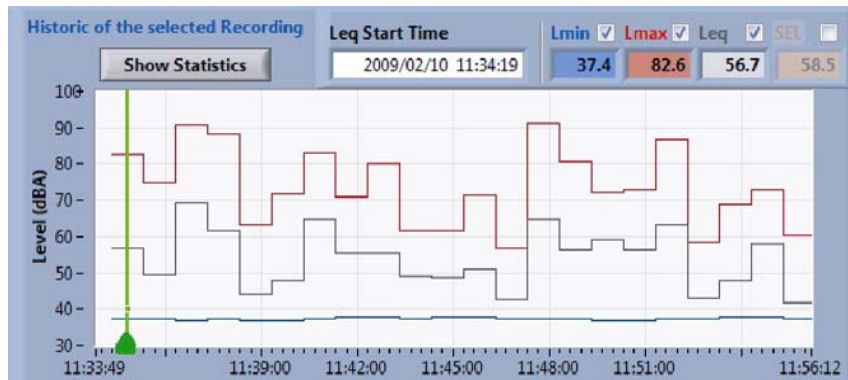

- 1) Insert the installation CD provided into your CD Drive. Run the CD Drive and follow the PICCOLO SLM Software Setup Wizard instructions.
- 2) Connect the PICCOLO SLM Unit to the PC via the USB cable provided.
- 3) From the computer's START menu, select PROGRAMS > PiccoloSLM > PiccoloSLM_Manager. The PICCOLO SLM Unit synchronizes time and date with the PC and the following menus will be available:
 - *SETUP* to configure the measurement parameters.
 - *RECORDINGS* to retrieve data.
 - *CALIBRATION* to re-calibrate the unit if needed

For detailed information about the software, see the **User's Guide. Pdf** on the CD or in *PROGRAMS > PiccoloSLM*